

Hotwire thermo-anemometer VT 110 – VT 115



KEY POINTS

- Easy to use
- Adjustable backlight
- Automatic average
- Hold-min-max functions
- Selection of units
- Airflow calculation

TECHNICALS FEATURES

Measuring element	Hotwire air velocity: thermistance with a negative temperature coefficient. Ambient temperature: NTC sensor
Display	4 lines, LCD technology. Sizes 50 x 36 mm. 2 lines of 5 digits with 7 segments (value) 2 lines de 5 digits with 16 segments (unit)
Probes	VT 110: Stainless hotwire probe VT 115: Telescopic hotwire probe bent at 90°
Cable	Straight, lenght: 2 m
Housing	ABS, protection IP54
Keypad	5 keys
Conformity	Directives EMC 2014/30/EU and EN 61010-1
Power supply	4 batteries AAA LR03 1.5 V
Battery life	180 hours
Ambience	Neutral gas
Operating temperature (instrument)	From 0 to +50°C
Operating temperature (probe)	From 0 to +50°C
Storage temperature	From -20 to +80°C
Auto shut-off	Adjustable from 0 to 120 min
Weight	250 g

SPECIFICATIONS

Measuring units	Measuring range	Accuracy**	Resolution
Velocity (hotwire)			
m/s, fpm, km/h	From 0.15 to 30 m/s	From 0.15 to 3 m/s: $\pm 3\%$ of reading ± 0.05 m/s From 3.1 to 30 m/s: $\pm 3\%$ of reading ± 0.2 m/s	0.01 m/s 0.1 m/s
Airflow			
m³/h, cfm, l/s, m³/s	From 0 to 99 999 m³/h	$\pm 3\%$ of reading $\pm 0.03 \times$ area (cm²)	1 m³/h
Temperature			
°C, °F	From -20 to +80°C	$\pm 0.3\%$ of reading $\pm 0.25^\circ\text{C}$	0.1°C

* Except class 110 S


** All accuracies indicated in this document were stated in laboratory conditions and can be guaranteed for measurements carried out in the same conditions, or carried out with required compensation.



FUNCTIONS

- Airflow calculation
- Airflow calculation with cone
- Selection of units (air velocity, airflow and temperature)
- Hold function
- Display of minimum and maximum values
- Adjustable auto shut-off
- Backlight
- Selection of cone
- Dimensions of rectangular and circular duct
- Automatic average
- Air velocity compensation in atmospheric pressure


DIMENSIONS

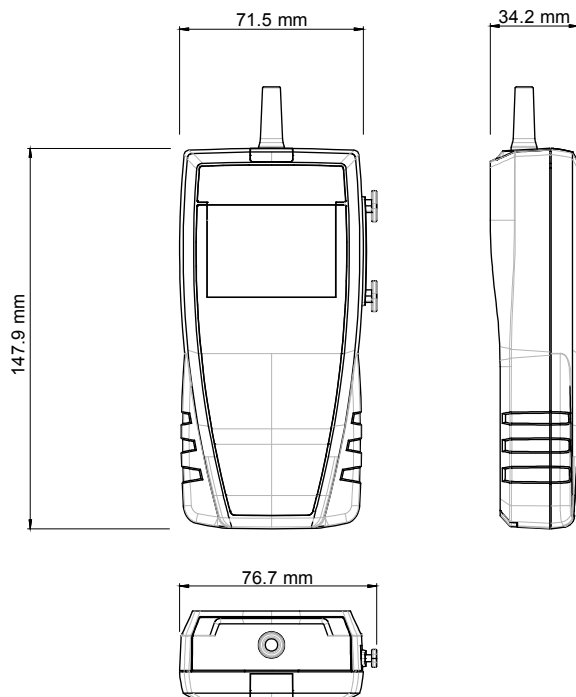

OPERATING PRINCIPLES

Hotwire anemometer

A wire is continuously heated at a superior temperature than ambient and continuously cooled by airflow. Constant temperature is maintained by a regulation circuit. The heating current is proportional to the airflow velocity.

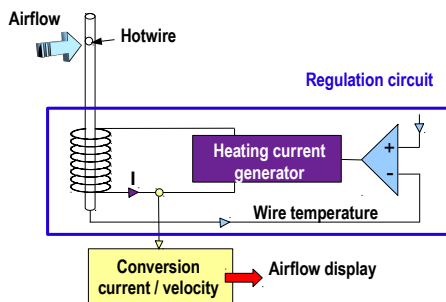

Thermometer: NTC probe

Probes with a negative temperature coefficient are thermistors with a resistance that decreases with the temperature, according to the equation below:

$$R_{(T)} = R_{(T_0)} e^{\left(\frac{\alpha}{100} \times (T_0 + 273.15)^2 \times \left(\frac{1}{T + 273.5} - \frac{1}{T_0 + 273.5} \right) \right)}$$

$R_{(T)}$ = resistance sensor value at temperature T

$R_{(T_0)}$ = resistance value of the temperature sensor at reference T_0

T and T_0 in $^{\circ}\text{C}$

α and T_0 sensor specific constants

SUPPLIED WITH

Instruments are supplied with:

- VT 110: Straight hotwire probe
- VT 115: Telescopic hotwire probe bent at 90°
- Calibration certificate*
- Transport case (ref: ST 110)



* Except class 110 S

ACCESSORIES

CQ 15: Magnetic protective housing



K 35 – 75 – 120 – 150: Airflow cone



MT 51: ABS transport case



MAINTENANCE

We carry out calibration, adjustment and maintenance of your instruments to guarantee a constant level of quality of your measurements. As part of Quality Assurance Standards, we recommend you to carry out a yearly checking.

GUARANTEE

Instruments have 1-year guarantee for any manufacturing defect (return to our After-Sales Service required for appraisal).

www.kimo.fr

Distributed by :



EXPORT DEPARTMENT

Tel : + 33. 1. 60. 06. 69. 25 - Fax : + 33. 1. 60. 06. 69. 29

e-mail : export@kimo.fr

MW Instruments
meettechniek

uw distributeur | servicepartner

Antennestraat 26
1322 AB Almere
Nederland

+31 (0)36 535 06 51
info@mw-instruments.nl
www.mw-instruments.nl

onderdeel van
www.hitma.nl/mw

