

Gas leak detector FG 110

KEY POINTS

- Easy to use
- Indication of gas leaking in ppm, %vol or %LEL
- Hold-min-max function
- Adjustable back-light

TECHNICAL FEATURES

Measuring element	semiconductor sensor
Display	4 lines, LCD technology. Sizes 50 x 36 mm 2 lines of 5 digits with 7 segments (value) 2 lines of 5 digits with 16 segments (unit)
Probe	Flexible, 330 mm
Housing	ABS, protection IP54
Keypad	5 keys
Conformity	Directives CEM 2004/108/CE and NF EN 61010-1
Power supply	4 batteries AAA LR03 1.5 V
Autonomy	20 hours
Ambience	Neutral Gas
Operating temperature	From 0 to +50 °C
Storage temperature	From -20 to +80 °C
Auto shut-off	Adjustable from 0 to 120 min
Weight	295 g



SPECIFICATIONS

Measurement units	Measurement range	Accuracy ¹	Resolution
CH₄			
ppm	From 0 to 10000 ppm	20% of full scale	1 ppm
%vol	(LPG : 0-1800)		0.001%vol
%LEL	From 0 to 1% vol 0 to 20%LEL		0.01% LEL

¹All the accuracies indicated in this technical datasheet were stated in laboratory conditions, and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation


%LEL : is the limiting concentrations of gas (in air) that is needed for the gas to ignite and explode.

%VOL : is the limiting concentrations of gas (in air) that is needed for the gas to ignite and explode expressed in percentage of volume in air.

FUNCTIONS

- Detection of gas such as methane (CH₄), LPG (isopropanol and isobutane) and others combustible gas (hydrocarbons)
- Hold function
- Alarm (from 1000 to 10000 ppm)
- Display of minimum and maximum values
- Configurable auto shut-off
- Backlight

DIMENSIONS

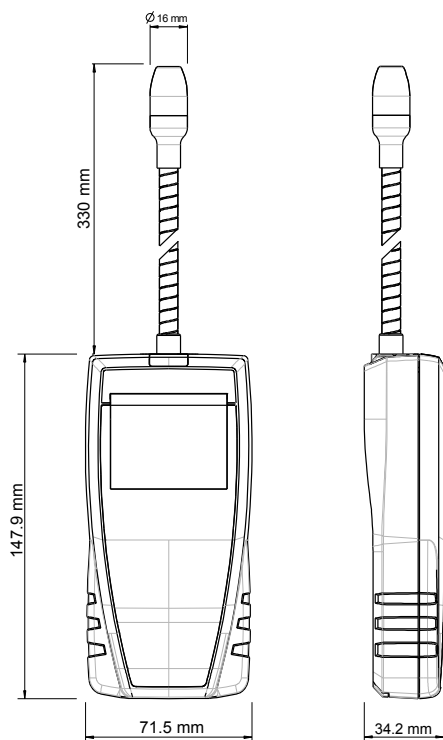

MAINTENANCE

We carry out calibration, adjustment and maintenance of your instruments to guarantee a constant level of quality of your measurements. As part of Quality Assurance Standards, we recommend you to carry out a yearly checking.

GUARANTEE

Instruments have 1-year guarantee for any manufacturing defect (return to our After-Sales Service required for appraisal).



Uw distributeur | servicepartner

MW Instruments B.V.

Antennestraat 26
1322 AB Almere
Nederland

+31 (0)36 535 06 51

info@mw-instruments.nl
www.mw-instruments.nl

www.kimo.fr



EXPORT DEPARTMENT

Tel : + 33. 1. 60. 06. 69. 25 - Fax : + 33. 1. 60. 06. 69. 29

e-mail : export@kimo.fr

SUPPLIED WITH

Instruments are supplied with :

- Verification certificate
- Transport case (ref : ST 110)



ACCESSORIES

CQ 15 : Magnetic protective housing



MT 51 : ABS transport case

